


SNARE DRUM TIPS

courtesy of



ASSEMBLING THE INSTRUMENT

- ▶ Unfold the legs of the base and tighten the leg adjustment lock wingnut.
- ▶ Insert the upper section of the stand into the base of the stand.
- ▶ Raise the stand to the desired height and tighten the height adjustment lock wingnut. (You'll be able to adjust the height again if necessary after adding the drum.)
- ▶ Unfold the support arms and set the snare drum centered on the stand so that the rubber insulators surround the drum.
- ▶ Turn the support arms adjustment knob clockwise until the rubber insulators are holding the snare drum in place. (When disassembling, you'll need to turn the knob counter-clockwise to loosen the support arms prior to removing the snare drum.)
- ▶ Engage snares by moving snare release lever into the 'up' position.

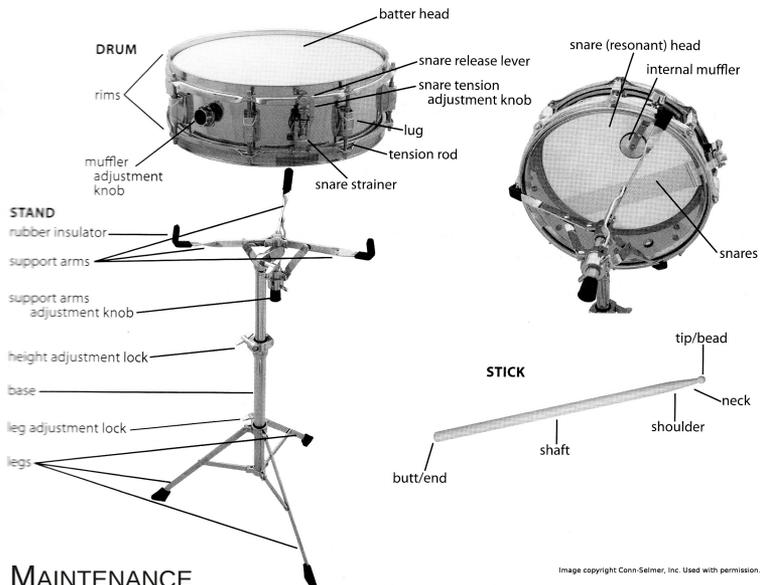

CARE & MAINTENANCE

- ▶ Keep other objects away from the heads to avoid scratching or breaking them (particularly the resonant head).
- ▶ When the instrument is not being used, disengage the snares by moving the lever to the 'down' position.
- ▶ Store the instrument in its case/bag when not in use.
- ▶ If the instrument needs repair, send it to Ellis Music.



HELPFUL ITEMS TO HAVE

- Drum sticks (various types)
- Stick bag
- Snare drum tuning key
- Metronome
- Music stand

Questions?
Contact Ellis Music
802-234-6400
www.ellismusic.com